



## DynoMix™ Multi-Size Gyro Mixer Troubleshooting Guide

<b>PROBLEM</b>	<b>CAUSE</b>	<b>REMEDY</b>
Mixer won't operate.	Not connected to power source.	Connect to power source.
	Building circuit breaker or fuse blown.	Reset breaker or replace fuse.
	Mixer door does not make contact with limit switch.	Readjust switch to make contact with limit switch screw when door is closed
	Motor thermal protector activated.	Allow to cool, then restart.
	Machine circuit breaker tripped.	Reset by pressing circuit breaker back in.
	Emergency switch activated.	Turn switch knob 1/4 turn clockwise to disengage.
Pail won't fit properly into clamping plates.	Pail damaged.	Fix or replace pail.
Mixer doesn't shut off at end of mixing cycle.	Faulty timer.	Contact a RED DEVIL EQUIPMENT customer service representative.
Mixer doesn't shut off when door is opened.	Faulty door limit switch.	Contact a RED DEVIL EQUIPMENT customer service representative.
Increasing mechanical noise.	Bearings worn or damaged.	Contact a RED DEVIL EQUIPMENT customer service representative.
Pail rotates inside the clamping plates.	Top pad worn.	Replace pad.
	Top clamp not secure.	Turn crank handle down until top plate is snug on pail.